

ROOF RACK INSTALLATION INSTRUCTIONS

Nissan NV



Please read before beginning

- *Stainless steel hardware may bind together when tightening—It is recommended that you apply an anti-seize assembly lubricant to the threads of each bolt before assembly*
- *This installation requires two people*

Required tools

- *Standard wrench set*
- *Leveling tool*

Included hardware

PRE-KIT 350454

Quantity

- | | |
|----------------------------------------------|----|
| • 70020 – 5/16 Stainless Washer | 16 |
| • 70021 – 5/16-18 x 3/4" Hex Bolt | 16 |
| • 70111 – 5/16" Lock Washer | 16 |
| • 70221 – 5/16"-18, SS, Low-Profile Weld Nut | 16 |
| • 70008 – 1/4-20 SS Nylock Nut | 16 |
| • 70009 – 1/4" SS Flat Washer | 32 |
| • 70318 – 1/4-20 x 1" SS Hex Head Cap Screw | 16 |
| • Antiseize Packet, 2g | 1 |



x8


Nissan NV Roof Rack Foot

Installation Instructions


1. Slide the Low-Profile Weld Nut (70221) under the mounting brackets on the roof.
(The Picture shows the prototype square nut)



2. Install the feet onto each of the rack mounting pads using the 1/4" hardware, but do not tighten completely

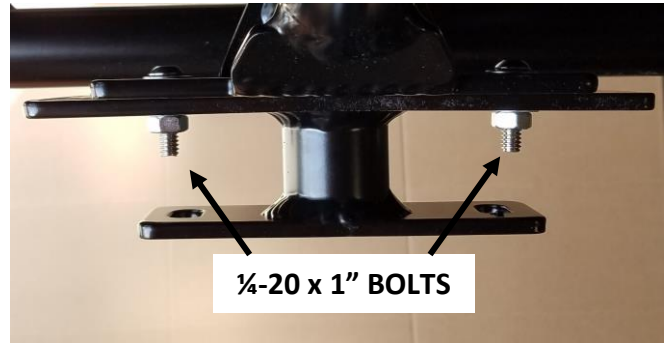

3. Set the roof rack down on the feet and install the 5/16" bolts through the feet and into the roof mounting locations.

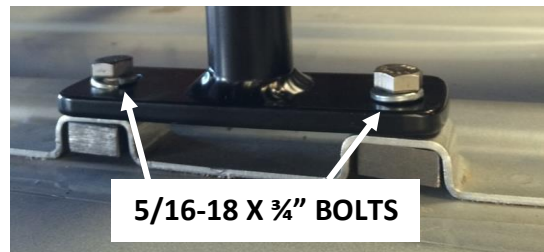

4. Line up the rack so it looks straight.
5. Starting with the corners, tighten all of the hardware on the rack.

